

Mountain Graphic

Website: <http://www.mountaingraphic.com>

Email: mountaingraphic@gmail.com

Phone: 606.335.0375


Fax: 315.693.2971

Vinyl Application Instructions

A. USE SMALL STRIPS OF MASKING TAPE TO POSITION SIGN IN DESIRED LOCATION.




B. FOR A HORIZONTAL SIGN (SHOWN) APPLY A MASKING TAPE STRIP VERTICALLY THROUGH THE CENTER OF THE SIGN TO CREATE A HINGE POINT.

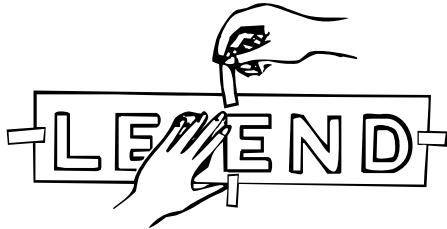


C. FOR A VERTICAL SIGN APPLY A MASKING TAPE STRIP HORIZONTALLY THROUGH THE CENTER OF THE SIGN TO CREATE A HINGE POINT.

D. REMOVE ONLY THE MASKING TAPE APPLIED IN STEP "A", THAT IS EITHER LEFT OF THE VERTICAL HINGE APPLIED IN STEP "B", OR THAT IS ABOVE THE HORIZONTAL HINGE POINT APPLIED IN STEP "C".

E. STARTING AT THE LEFT SIDE OR THE TOP EDGE, FOLD ALL LAYERS OVER AND GENTLY PEEL AWAY THE BOTTOM LAYER OF MATERIAL AT A 180 DEGREE ANGLE FROM THE OTHER 2 LAYERS OF MATERIAL ONLY TO THE POINT OF YOUR HINGE, EXPOSING THE ADHESIVE SIDE OF THE VINYL, CUT OFF THIS LAYER AT YOUR HINGE AND DISCARD.

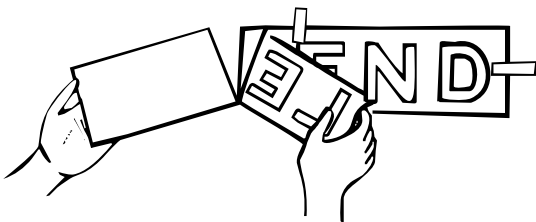

F. BEGINNING AT YOUR HINGE, HOLDING THE SQUEEGEE AT A 45 DEGREE ANGLE, WITH FIRM EVEN PRESSURE, SQUEEGEE THE REMAINING 2 LAYERS OF MATERIAL FROM EITHER RIGHT TO LEFT IN THE CASE OF A VERTICAL HINGE OR FROM BOTTOM TO TOP IN THE CASE OF A HORIZONTAL HINGE.

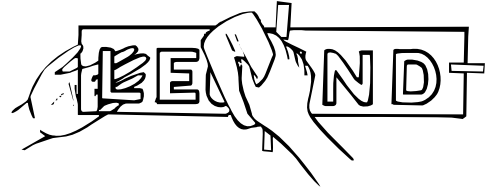

G. AFTER THE FIRST ONE-HALF OF THE GRAPHIC IS COMPLETELY SQUEEGEED, REMOVE THE REMAINING MASKING TAPE.

H. STARTING AT THE FORMER HINGE POINT, REMOVE AND DISCARD THE REMAINING BOTTOM LAYER OF MATERIAL.



I. STARTING AT THE FORMER HINGE POINT, HOLDING THE SQUEEGEE AT A 45 DEGREE ANGLE, WITH FIRM EVEN PRESSURE, SQUEEGEE THE REMAINING ONE-HALF OF THE SIGN FROM LEFT TO RIGHT IN THE CASE OF A VERTICAL HINGE, OR FROM TOP TO BOTTOM IN THE CASE OF A HORIZONTAL HINGE.

J. WHEN YOU HAVE COMPLETELY SQUEEGEED THE ENTIRE SIGN, SLOWLY BEGIN TO REMOVE THE TOP LAYER OF MATERIAL, KEEPING THIS LAYER AS CLOSE TO THE SURFACE AS YOU GENTLY PULL IT AWAY FROM THE SURFACE IN A CONTINUOUS MOTION AT A 180 DEGREE ANGLE.

